


1586-2586 | 内置模块接线盒（不含继电器板）

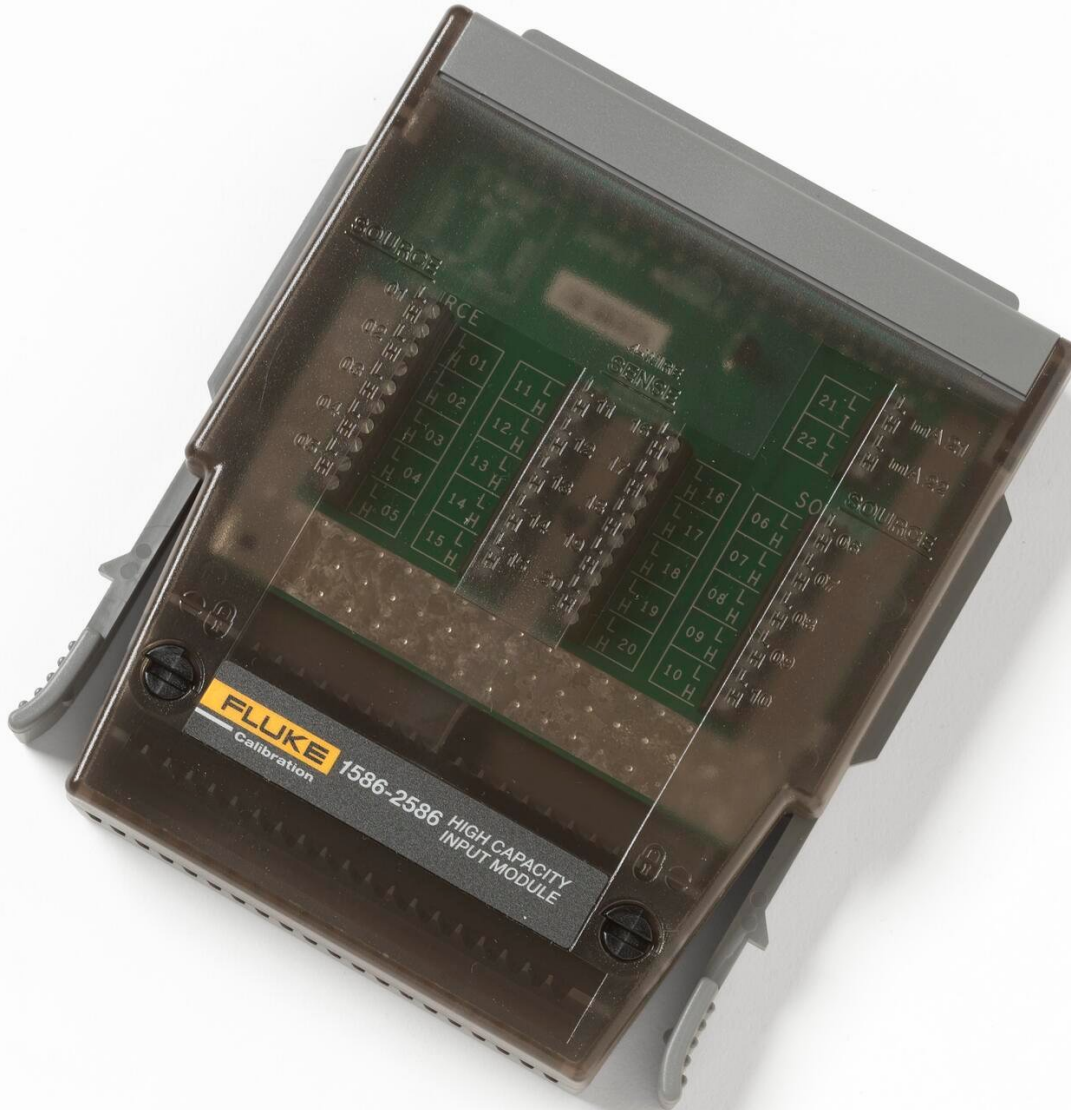

产品概述: 1586-2586 | 内置模块接线盒（不含继电器板）

If you want to configure the 1586A yourself to work with the 1586-2586 High-Capacity Module, you will need a relay card. However, if you already have a slot in the back panel of the 1586A configured for use with the 1586-2586, then you don't need another relay card. You can simply slide the 1586-2586 High-Capacity Module into the preconfigured slot and begin taking measurements. The 1586-2586 High-Capacity Module is designed with universal input channels to measure temperature, resistance, dc voltage, and dc current for data acquisition applications where channel count and scan speed are important.



产品规格: 1586-2586 |内置模块接线盒（不含继电器板）

型号



1586-2586

内置模块接线盒（不含继电器板）



Fluke. 让您的工作畅通无阻。

福禄克测试仪器（上海）有限公司 电话：400-810-3435 ©2025 福禄克公司
04/2025
北京福禄克世禄仪器维修和服务有限公司 电
话：400-615-1563 未经许可，本文档禁止修改
福禄克测试仪器（上海）有限公司上海维修中心 电
话：021-54402301, 021-54401908分机269
福禄克测试仪器（上海）有限公司深圳第一特约维修点
电话：0755-86337229